### **IMPORTANT NOTICE - READ CAREFULLY**

BALL VALVE

STEEL BARREL

OUTER -

MALE QUICK

FEMALE

SAMPLING

BALL VALVE

STEEL BARREL

OUTER-

MALE QUICK

FFMAI F

SAMPLING

PRESSURE GALIGE

HOUSING

3210-541 3/22

PRESSURE GALIGE

# **Sampling Procedures** For Copper Meter Resetters with Sampling Stations

- 1. Remove protective cap from the main sampling valve.
- Remove protective cap from the bottom of the sampling faucet. Verify that the ball valve on the 2 sampling faucet is in the off position.

NOTE: At this point some operators choose to spray both the female sampling station valve and the male sampling rod key with a chlorine solution. This procedure is not endorsed due to the extreme corrosive nature of chlorine. However, this procedure should not result in damage to the sampling unit as both parts are constructed of brass, stainless steel, rubber, and plastic,

- 3. Place male end of faucet into female sampling valve and visually bring the rod into correct alignment for coupling.
- 4. Firmly press straight down on the rod until it locks into the coupling.
- Rotate the faucet to obtain a suitable discharge direction. 5.
- Open ball valve on faucet and flush thoroughly. 6.
- Slowly throttle the ball valve down to obtain a suitable flow for collecting the water sample. 7. Do not turn the valve off prior to collecting the sample. Allow water to continuously flow from initial opening of the valve to completion of sample collection.
- 8. Collect water sample.

EST. 185

M<sup>c</sup>Donald

- 9. Close ball valve and press down on the sampling faucet's outer housing to disengage rod from the coupler.
- 10. Replace protective caps on both sampling faucet and sampling station.
- 11. USE ONLY ON COLD WATER SERVICES.



### IMPORTANT NOTICE - READ CAREFULLY **Sampling Procedures**

# For Copper Meter Resetters with Sampling Stations

- Remove protective cap from the main sampling valve.
- 2. Remove protective cap from the bottom of the sampling faucet. Verify that the ball valve on the sampling faucet is in the off position.

NOTE: At this point some operators choose to spray both the female sampling station valve and the male sampling rod key with a chlorine solution. This procedure is not endorsed due to the extreme corrosive nature of chlorine. However, this procedure should not result in damage to the sampling unit as both parts are constructed of brass, stainless steel, rubber, and plastic.

- Place male end of faucet into female sampling valve and visually bring the rod into correct 3. alignment for coupling.
- Firmly press straight down on the rod until it locks into the coupling. 4
- Rotate the faucet to obtain a suitable discharge direction. 5.
- 6. Open ball valve on faucet and flush thoroughly.
- 7. Slowly throttle the ball valve down to obtain a suitable flow for collecting the water sample. Do not turn the valve off prior to collecting the sample. Allow water to continuously flow from initial opening of the valve to completion of sample collection.
- 8. Collect water sample.
- 9. Close ball valve and press down on the sampling faucet's outer housing to disengage rod from the coupler.
- 10. Replace protective caps on both sampling faucet and sampling station.
- 11. USE ONLY ON COLD WATER SERVICES.



### 3210-541 3/22

**Sampling Procedures** For Copper Meter Resetters with Sampling Stations

- Remove protective cap from the main sampling valve.
- Remove protective cap from the bottom of the sampling faucet. Verify that the ball valve on the 2 sampling faucet is in the off position.

NOTE: At this point some operators choose to spray both the female sampling station valve and the male sampling rod key with a chlorine solution. This procedure is not endorsed due to the extreme corrosive nature of chlorine. However, this procedure should not result in damage to the sampling unit as both parts are constructed of brass, stainless steel, rubber, and plastic,

- Place male end of faucet into female sampling valve and visually bring the rod into correct 3. alignment for coupling.
- Firmly press straight down on the rod until it locks into the coupling. 4.
- Rotate the faucet to obtain a suitable discharge direction. 5.
- 6. Open ball valve on faucet and flush thoroughly.
- Slowly throttle the ball valve down to obtain a suitable flow for collecting the water sample. 7. Do not turn the valve off prior to collecting the sample. Allow water to continuously flow from initial opening of the valve to completion of sample collection.
- 8. Collect water sample.

M<sup>®</sup>Donald

1.

- 9. Close ball valve and press down on the sampling faucet's outer housing to disengage rod from the coupler.
- Replace protective caps on both sampling faucet and sampling station. 10.
- 11. USE ONLY ON COLD WATER SERVICES.

800.292.2737 | sales@aymcdonald.com | aymcdonald.com 3210-541 3/2

## **IMPORTANT NOTICE - READ CAREFULLY Sampling Procedures**

# For Copper Meter Resetters with Sampling Stations

- Remove protective cap from the main sampling valve.
- 2. Remove protective cap from the bottom of the sampling faucet. Verify that the ball valve on the sampling faucet is in the off position.

NOTE: At this point some operators choose to spray both the female sampling station valve and the male sampling rod key with a chlorine solution. This procedure is not endorsed due to the extreme corrosive nature of chlorine. However, this procedure should not result in damage to the sampling unit as both parts are constructed of brass, stainless steel, rubber, and plastic.

- Place male end of faucet into female sampling valve and visually bring the rod into correct 3. alignment for coupling.
- Firmly press straight down on the rod until it locks into the coupling. 4.
- 5. Rotate the faucet to obtain a suitable discharge direction.
- 6. Open ball valve on faucet and flush thoroughly.
- Slowly throttle the ball valve down to obtain a suitable flow for collecting the water sample. 7. Do not turn the valve off prior to collecting the sample. Allow water to continuously flow from initial opening of the valve to completion of sample collection.
- Collect water sample. 8.
- Close ball valve and press down on the sampling faucet's outer housing to disengage rod from the coupler. 9.
- Replace protective caps on both sampling faucet and sampling station. 10.





1.





<sup>800.292.2737 |</sup> sales@aymcdonald.com | aymcdonald.com





WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380. WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

800.292.2737   sales@aymcdonald.com   aymcdonald.com 3210-541 3/22	800.292.2737   sales@aymcdonald.com   aymcdonald.com 3210-541 3/22
WARNING!	M <sup>G</sup> Donald WARNING!

WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380. WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

3210-541 3/22